

**6. Complete Installation**  
When the installation is complete, verify all necessary connections have been made. Switch the AC Power on and join the battery pack connector.

**7. Operation**  
Normal Mode: AC power is present. The AC driver operates the LED load as designed. The emergency pack is charging in a standby mode. The test button will be lit, showing that the battery is charging.

Emergency Mode: When the AC power goes out, the emergency pack detects the power outage and automatically switches to the emergency mode. The LED load is illuminated, for a minimum of 90 minutes. When AC power is restored, the emergency pack switches back to Normal Mode and starts re-charging.



**8. Testing Procedures**  
Press the test button to cut the power to the AC driver and switch the system to emergency mode. Release the test button to return to normal mode. Switch off the circuit breaker to simulate a full power outage. For Initial Testing, allow the unit to charge approximately 1 hour, then conduct a short discharge test. Allow a 24 hour charge before conducting a one hour test.

NFPA 101, Life Safety Code outlines the following schedule:  
Monthly - Insure that the test button light is illuminated. Conduct a 30 second discharge test by depressing the test button. The LED load should operate at reduced output.  
Annually - Insure that the test button is illuminated. Conduct a full 90 minute discharge test. The unit should operate as intended for the duration of the test.  
Written records of the testing shall be kept by the owner for inspection by the authority having jurisdiction.

Page 4 of 4  
Keystone Technologies 1390 Welsh Road, North Wales, PA 19454 Phone (800) 464-2680 www.keystonetech.com  
Specifications subject to change. Last revised on 3.28.17

290.00 mm

210.00 mm

**INSTALLATION AND OPERATING INSTRUCTIONS FOR THE FOLLOWING PRODUCTS:**  
**CAT. NO. KT-EMRG-LED-5-500-AC**

**INSTALLATION**  
Product includes the following components:

PARTS	QUANTITY
LED Emergency Driver	1
Instruction Sheet	1
Luminaire Modification Label	1
Test Button	1

**Note:** Install requires application of the Luminaire Modification Label provided, as per UL. This label includes the statement: "This equipment has more than one power supply connection point." This label must be applied to the fixture housing during installation.

**IMPORTANT SAFEGUARDS**  
When using electrical equipment, basic safety precautions should always be followed including:  
**READ AND FOLLOW ALL SAFETY INSTRUCTIONS**  
**WARNING:** Risk of fire or electric shock. Luminaire wiring and electrical parts may be damaged when drilling for installation of LED Emergency Backup. Check for enclosed wiring and components.  
**WARNING:** Risk of fire or electric shock. This LED Emergency Backup installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.  
**WARNING:** Risk of fire or electric shock. LED Emergency Backup is only for use in surface mount or recessed Type IC or Non-IC luminaires listed to UL Standards. Suitable for use in damp locations and plenum spaces. Not for use in heated air outlets or hazardous locations.  
**WARNING:** Risk of fire or electric shock. Do not alter, relocate, or remove wiring, lamp holders, power supply, or any other electrical component.  
**WARNING:** To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.  
**WARNING:** Do not make or alter any open holes of the wiring enclosure or electrical component enclosure during installation. Only those open holes indicated in the instructions and/or drawings may be added or altered as a result of LED Emergency Backup installation. Do not leave any other open holes in the wiring enclosure or electrical component enclosure during installation.  
**CAUTION:** Before installing, make certain the AC power to the fixture is off.  
**CAUTION:** The electrical rating of this product is 120-277V. Installer must confirm that there is 120-277V at the fixture before installation.  
**CAUTION:** To prevent electrical shock, only mate unit connector after installation is complete and before the AC power to the fixture is back on.  
**CAUTION:** This fixture provides more than one power supply output source. To prevent electrical shock, disconnect both normal and emergency sources by turning off the AC branch circuit and disconnecting the unit connector.  
**CAUTION:** This is a sealed unit. Components are not replaceable. Replace the entire LED Emergency Backup unit when necessary.  
Do not use outdoors.  
This LED Emergency Backup unit requires an un-switched AC power source of 120-277V, 50/60 Hz. The AC driver MUST be on the same branch circuit as the LED Emergency Backup unit.  
Do not let power supply cords touch hot surfaces.  
Do not mount near gas or electric heaters.  
Install in accordance with the National Electrical Code and local regulations.  
Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.  
The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.  
Do not use this equipment for other than intended use.  
Use with grounded, UL Listed, damp location rated fixtures and case should be grounded.  
The Driver is intended for ordinary locations and for permanent installation into one or more Listed emergency luminaires.

**SAVE THESE INSTRUCTIONS**

Page 1 of 4  
Keystone Technologies 1390 Welsh Road, North Wales, PA 19454 Phone (800) 464-2680 www.keystonetech.com

**INSTALLATION**

**1. Read and understand all warnings and notes stated above, before proceeding with installation.**

**2. Fixture Compatibility & Applications**  
The KT-EMRG-LED-5-500-AC emergency pack can be used with most LED loads that are designed to operate on 120-277V input, with a maximum power consumption less than 50W.  
These emergency packs have been evaluated to and found compliant to UL 924. The emergency pack assembly is accepted as a component of a luminaire where the suitability of the combination shall be determined by UL or Authorities Having Jurisdiction. The as-installed performance of the system must meet or exceed all Federal, State, and Local code requirements.  
Reference LED Load for Emergency Pack is Type B LED tubes. Emergency Pack is also compatible with other LED loads such as Keystone Future Fit AC LED kits. Contact Keystone for questions on product compatibility.

Model	Luminaire	Max. mounting height
KT-EMRG-LED-5-500-AC	(1) Type B LED tube, KT-LED10.5-48G-8xx-D, (IFAR/7) E471785	8.6ft(2.63m) based on reference LED load

**Specification Chart**

Catalog No.	Rated Output Power	Nominal Lumen Output*
KT-EMRG-LED-5-500-AC	5W (Constant)	500 Lumens

\*Nominal lumen output is based on a standard LED fixture rated efficacy (lumens per watt, lm/w) of 100 lm/w.


Multiply lm/w by Rated Output Power of emergency pack to determine lumen output of LED Load during emergency operation.  
To calculate the minimum lumen output of LED Load under emergency operation:  
a. Determine the LED Load efficacy under normal AC operation, based on LED Load manufacturer published data, in lumens per watt (lm/w).  
1. Reference DLC QPL (www.designlights.org) for rated data on LED Load efficacy. If LED Load is not found on DLC QPL, contact LED Load manufacturer.  
b. Multiply LED Load lm/w by rated output power of emergency pack. (Example: 104 lm/w x 5W = 520 lumens.)

**3. Determining Adequacy of Means-of-Egress Lighting Levels**  
Follow industry standards by utilizing available .ies files and lighting design software for your dedicated emergency luminaires, with the above calculated emergency lumens, and validate your as-installed plans in accordance with the applicable life safety codes governing your project.  
While these products are compliant with the requirements of UL Standard 924, it is ultimately the responsibility of the designer/specifier to assure the as-installed system delivers code compliant path-of-egress illumination in accordance with federal, state or local municipal requirements.


**4. INSTALLATION**  
**WARNING:** TO PREVENT HIGH VOLTAGE FROM BEING PRESENT ON BLACK & WHITE OUTPUT LEADS PRIOR TO INSTALLATION, INVERTER CONNECTOR MUST BE OPEN. DO NOT JOIN INVERTER CONNECTOR UNTIL INSTALLATION IS COMPLETE AND AC POWER IS SUPPLIED TO THE EMERGENCY DRIVER.

**INSTALLING THE EMERGENCY DRIVER**

**INSIDE DRIVER CHANNEL**

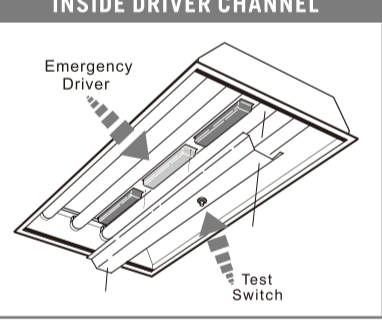


**INSIDE STRIP FIXTURE**

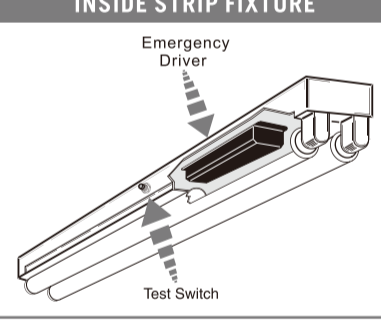


Page 2 of 4  
Keystone Technologies 1390 Welsh Road, North Wales, PA 19454 Phone (800) 464-2680 www.keystonetech.com


**INSTALLING THE TEST SWITCH**  
Refer to the illustrations above and install the test switch through the driver channel cover of a troffer or through the side of a strip fixture.  
Drill a 1/2" hole and install the switch as shown.  
Wire the test switch so that it removes AC power from the unswitched hot line to the emergency driver.

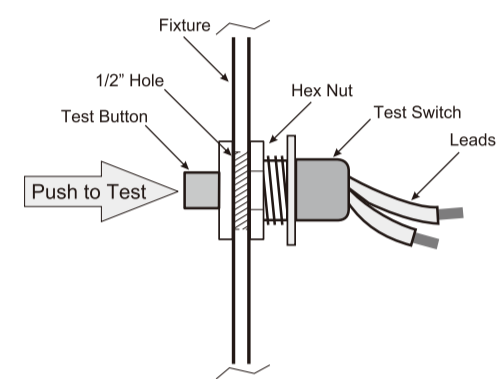

**INSTALLING THE CHARGING INDICATOR LIGHT**  
Install the CHARGING INDICATOR LIGHT as shown in the illustration below so that it will be visible after the fixture is installed.

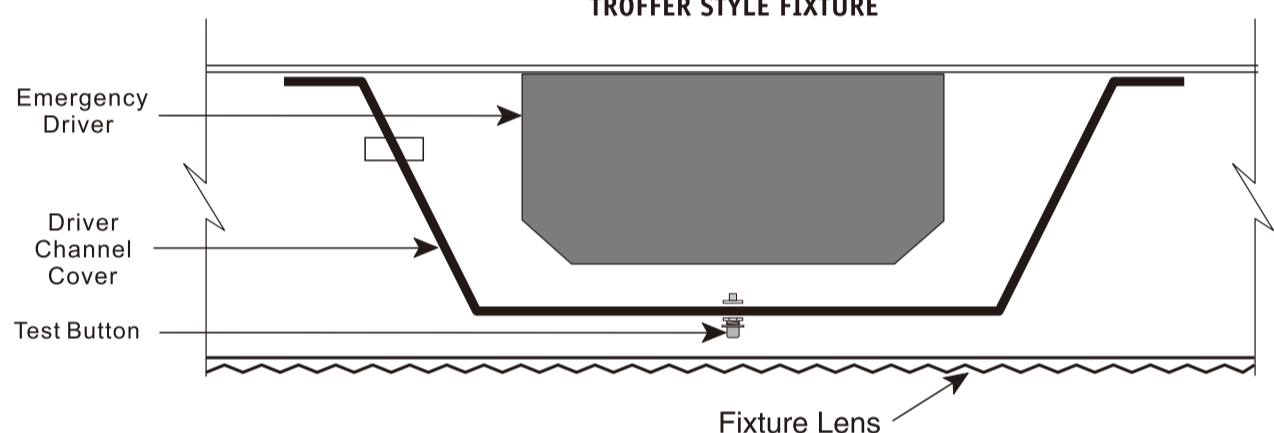

**Wiring Diagrams**

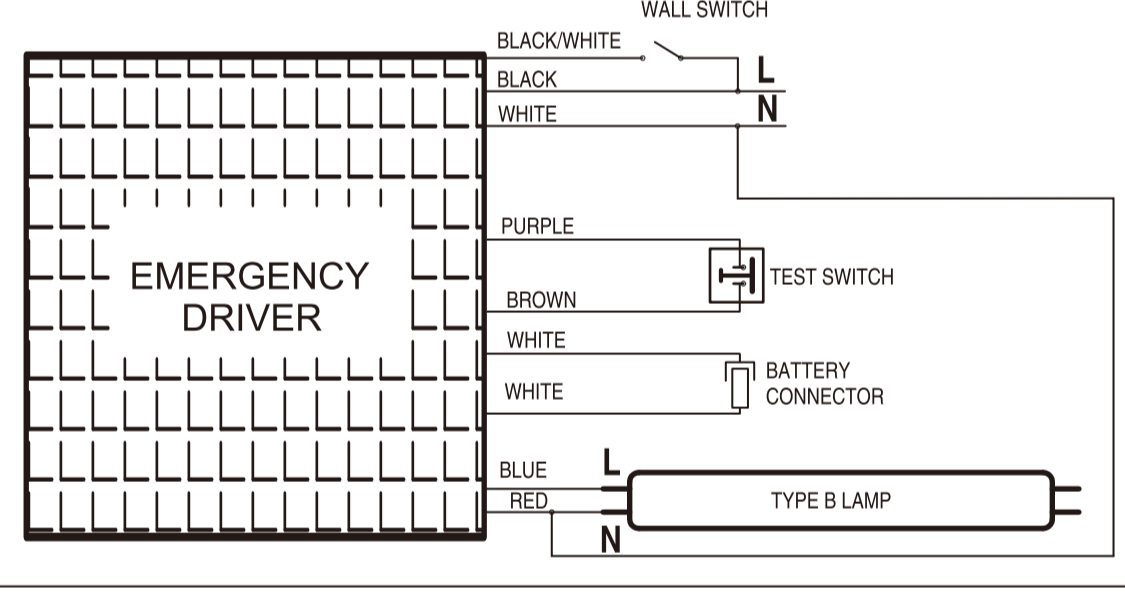

Page 3 of 4  
Keystone Technologies 1390 Welsh Road, North Wales, PA 19454 Phone (800) 464-2680 www.keystonetech.com