


KT-CWLED-SLB-1

INSTALLATION INSTRUCTIONS

STEP 1

Take off the fixture lens and channel cover. Remove the outer end cap of fixture on the side you want to install the sensor.


Figure 1

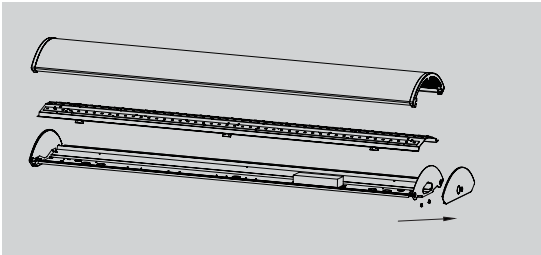

STEP 2

Insert the KTSL-FC2-12V-SM-PIR sensor into the mounting box and thread the included nut onto the backside to secure the sensor. Knock out the 1/2" KO on the new end cap and attach to the mounting box with screws.


Figure 2

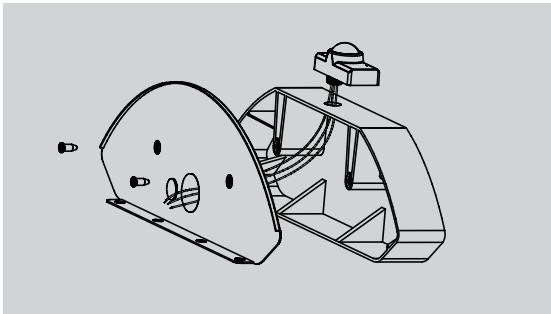

STEP 3

Install new end cap with mounting plate onto the end of the fixture. Wire sensor to the fixture's driver per the wiring diagram included with the KTSL-FC2-12V-SM-PIR sensor.

Figure 3

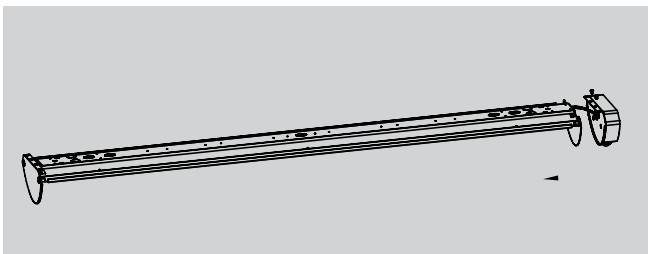



KT-CWLED-SLB-1

INSTALLATION INSTRUCTIONS

STEP 4

Reinstall the channel cover and fixture lens to complete the installation.

Figure 4

